

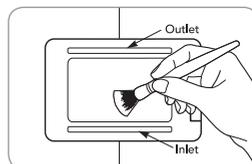


## ■ Cleaning the particle sensor (clean every 2 months)

1. Clean the particle sensor air inlet and outlet with a soft brush or vacuum cleaner.
  - \* Take care that dust does not fall inside the purifier while cleaning.

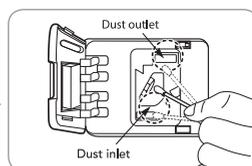


2. Open the particle sensor cover on the upper side of the purifier. (Use the particle sensor cover slots to open the cover.) Wet a cotton ball with a small amount of water and wipe the lens, dust inlet and outlet, then wipe again with a dry cotton ball to remove moisture.
  - \* If cleaning is not done regularly, the performance of the particle sensor may decrease.
  - \* Clean more often in very dusty environments.

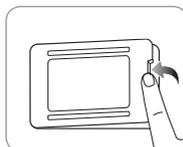

## ■ Cleaning the front cover

Remove the front cover from the purifier and then wipe away dust stuck to the surface with a soft, dry cloth or soft brush.


- \* If there is severe contamination, use a damp cloth (do not use abrasives).

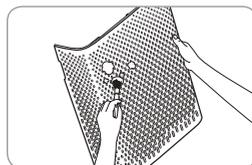

## ■ Cleaning the purifier

Wipe with a soft, dry cloth.

- \* If there is severe contamination, use a damp cloth (do not use abrasives).

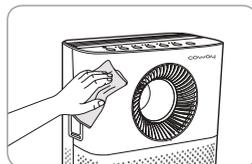

# CLEANING METHOD



Tips

- Always unplug the power cord before cleaning the filter.
- The pre-filter can be reused after dust removal and cleaning with water.
- If the pre-filter is not cleaned for a long time, the product performance may decrease and problems may occur.
- The fine dust filter, deodorization filter and HEPA filter cannot be reused after cleaning. Never clean them with water.


## ■ Pre-filter (clean every 2-4 weeks)

1. Pull both sides of the front cover to open.




2. Pull the pre-filter handle while taking it out to separate it from the fine dust filter.

- \* Be careful that dust doesn't fall out during removal.

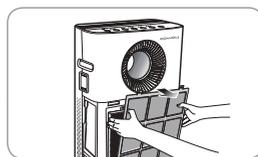

3. Remove dust with water or a vacuum cleaner depending on the degree of contamination.

- \* Be careful not to let dust enter the purifier while cleaning.

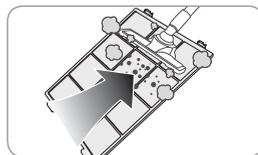

4. Push the completely dry pre-filter all the way into the purifier to install it. Close the front cover again.

- \* When you assemble the fine dust filter, be sure that the blue side of the filter must be at the front



# FILTER REPLACEMENT

---

## ■ How to replace

- Refer to the filter installation method specified on page 10 to replace the filters.
- During filter assembly, be sure to check the front.
- Only use genuine Coway filters to keep the purifier at its optimal performance.
- Always unplug the power plug before replacing filters.

## ■ Filter cleaning and replacement cycle

Filter	Cleaning / replacement time	Cleaning / replacement
Pre-filter	Once / 2-4 weeks	Clean and wash
Fine Dust filter	Once / 4 months	Replace
Deodorization filter	Once / 24 months	Replace
HEPA filter	Once / 12 months	Replace

\* Based on 24 hour (1 day) use at low air cleaning level

\* The filter replacement cycle is the recommended cycle and may vary depending on usage environment.